


# Zeno 3 Empire

assembly instructions

**SAVIC**<sup>®</sup>  
pets' favourite

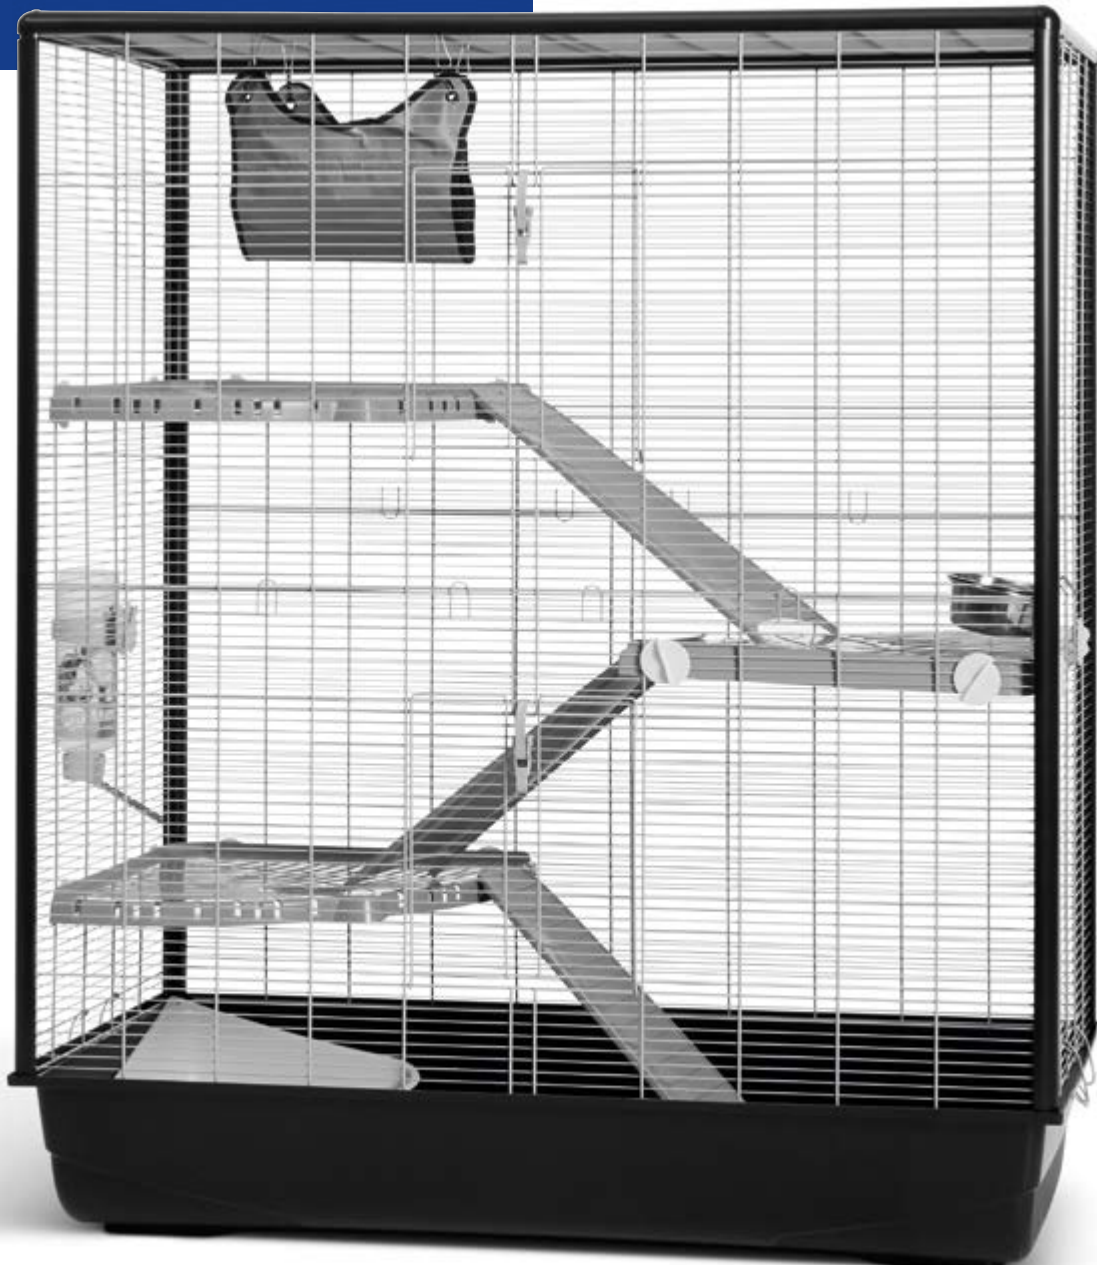



Follow us on  

**#petslovesavic**


# Check list

Before you start assembling your cage, please check if you have all the components. If any part is missing or damaged, do not use your cage.


- A** 1 plastic bottom tray
- B** 3 platforms
- C** 3 ladders
- D** 1 stainless steel feeding bowl
- E** 1 drinking bottle with holder
- F+G** 12 fixings for platform
- H** 4 corner pieces
- I** 1 corner toilet
- J** 1 hammock
- K** 4 vertical profiles
- L** 1 roof panel
- M** 1 top front panel
- N** 1 bottom front panel with hooks
- O** 2 sides panels with hooks
- P** 1 top back panel
- Q** 1 bottom back panel with hooks

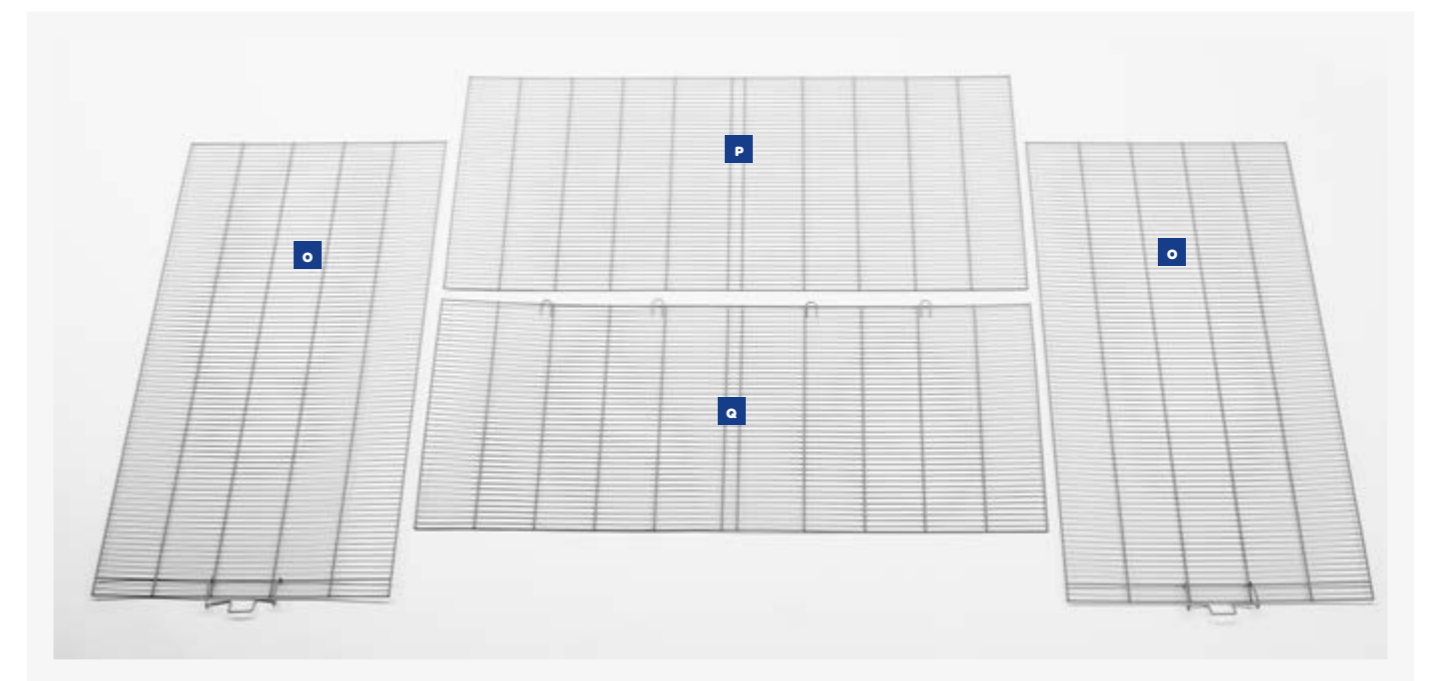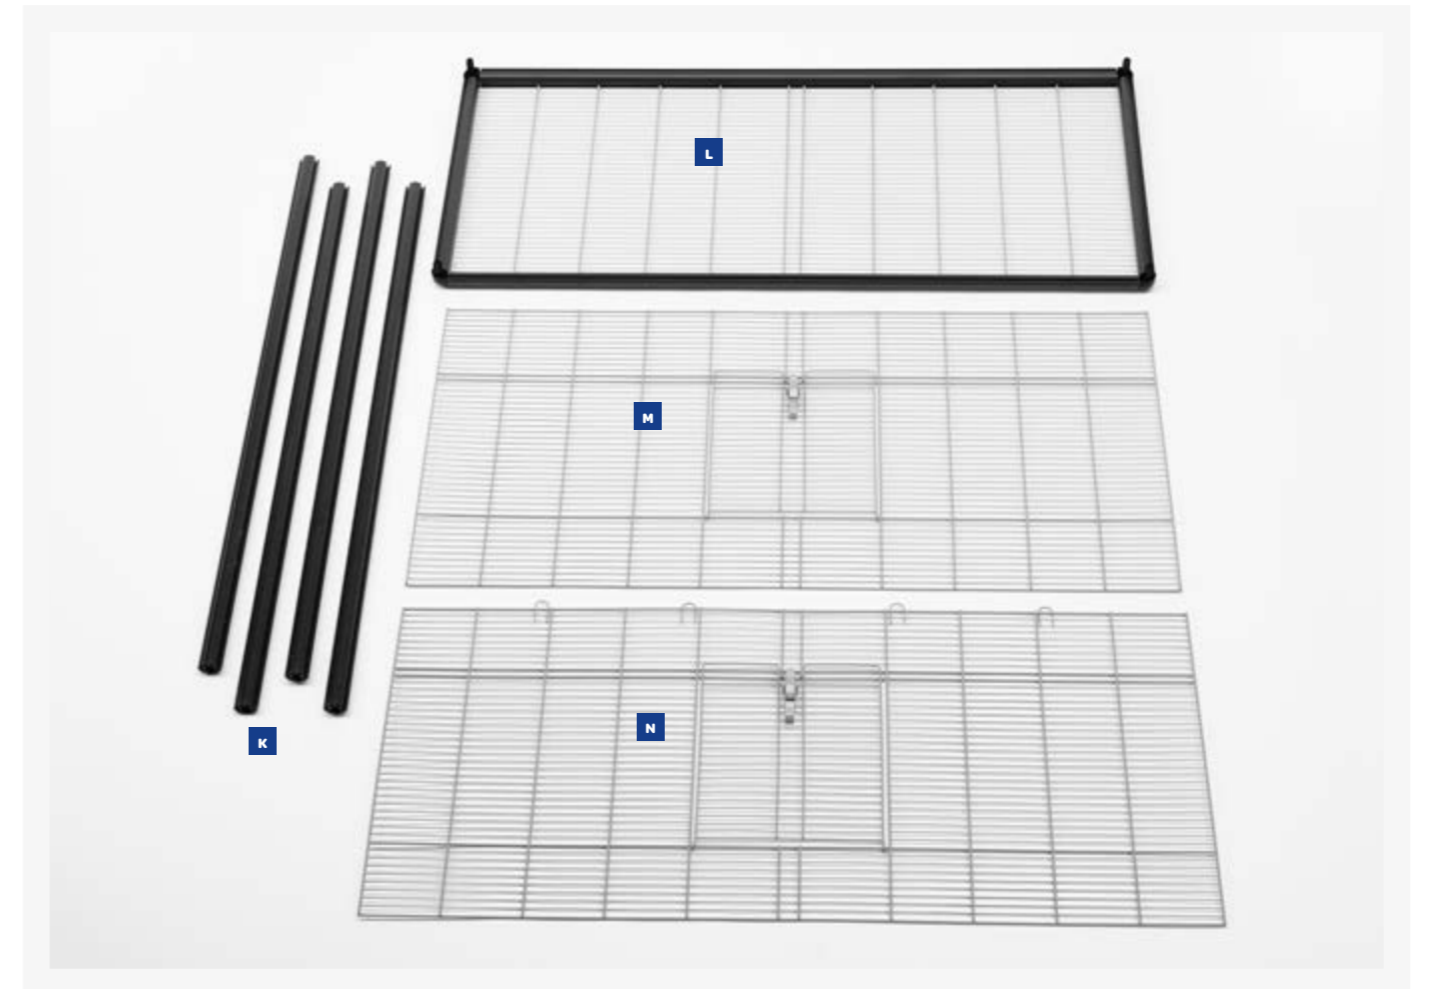



## instruction video

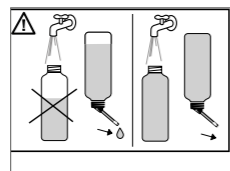



**ATTENTION**  
 To avoid leakage, always fill bottle 100%.  
 Om lekken te vermijden, vul de fles altijd 100%.  
 Afin d'éviter des fuites, toujours remplir la bouteille 100%.  
 Um Tropfen zu vermeiden, Tränke immer 100% füllen.  
 Para evitar gotas, siempre llenar la botella 100%.

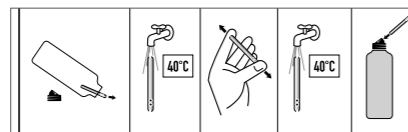

Rince spout with hot water before first use.  
 Voor eerste gebruik, buisje reinigen met warm water.  
 Avant premier usage, rincer la pipette à l'eau chaude.  
 Vor erster Verwendung, Röhrchen spülen mit heissem Wasser.  
 Antes de usarlo, limpiar el tubito con agua caliente.

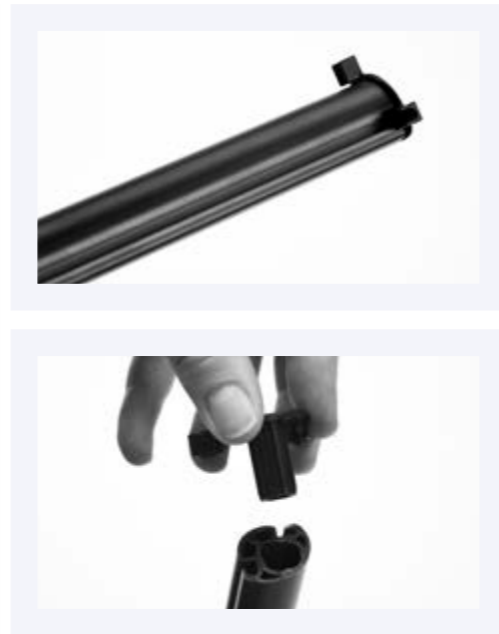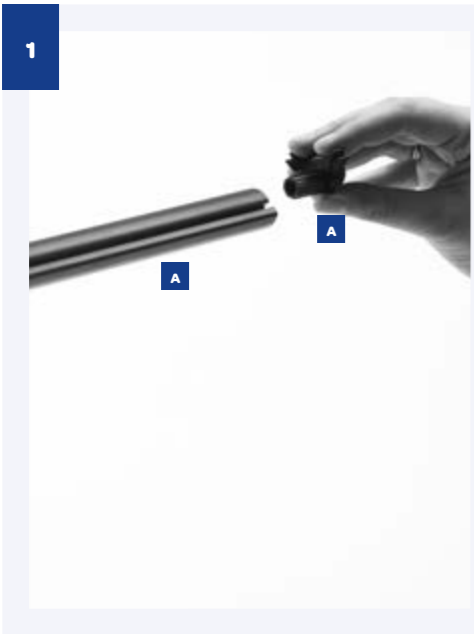

Attach on all 4 profiles (f) the 4 corner pieces (h).

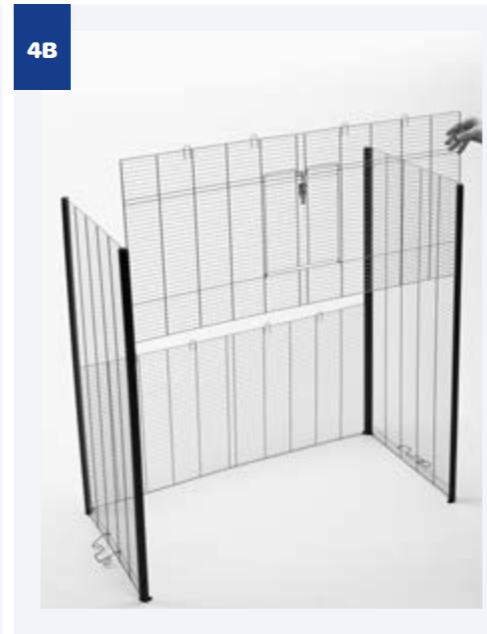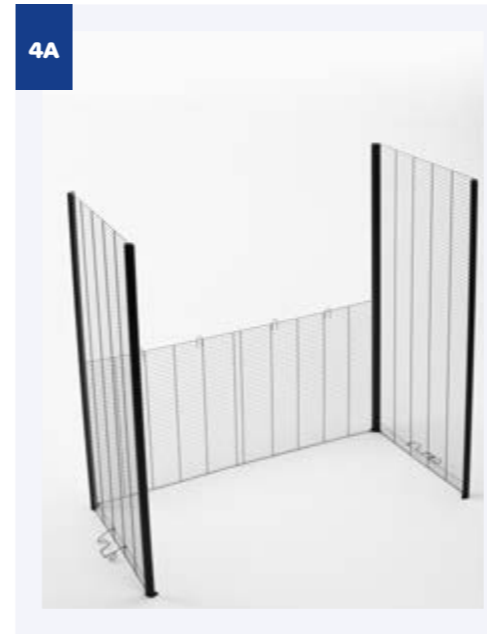


Turn the cage 180 ° and slide the front panel with hooks (n) in the profiles.

Make sure that the closure of the door is facing outwards.




Slide the 2 side panels (o) in the vertical profiles (k). Make sure that the closures are facing outwards and the panels are well placed in the corner pieces (h).

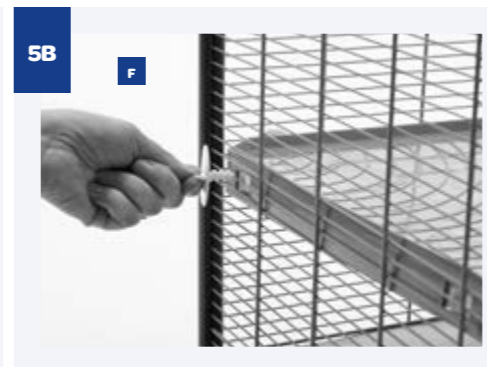

Insert 4 x g in every platform (b). Place the first platform left back: knobs between wire 12 and 13, height 13.5 cm or 5 ¼ inch as shown in 5 c. Do not tighten the screws (f) too strongly.



Slide the back panel with hooks (q) in the vertical profiles (k). Make sure the hooks are facing upwards and the vertical wires of the panel are on the outside

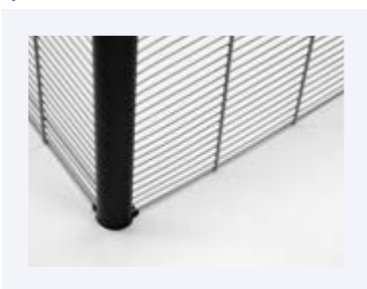


Repeat as indicated in figures 5a, 5b & 5c and place the 2nd platform right front: knobs between wire 35 and 36, height 37.5 cm or 15 inch, as shown in 6.



7

P

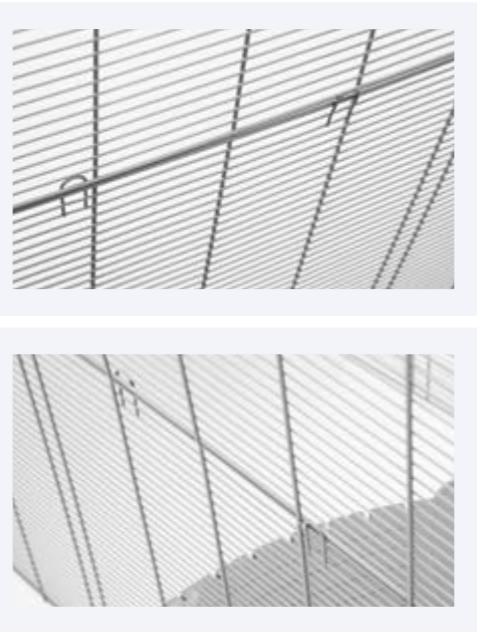

Slide the top back panel (p) into the profiles. Make sure the vertical wires are on the outside and the panels are assembled as shown.




9A

M



9B

Insert the top front panel (m) into the profiles. Again, make sure the closure of the door is on the outside.

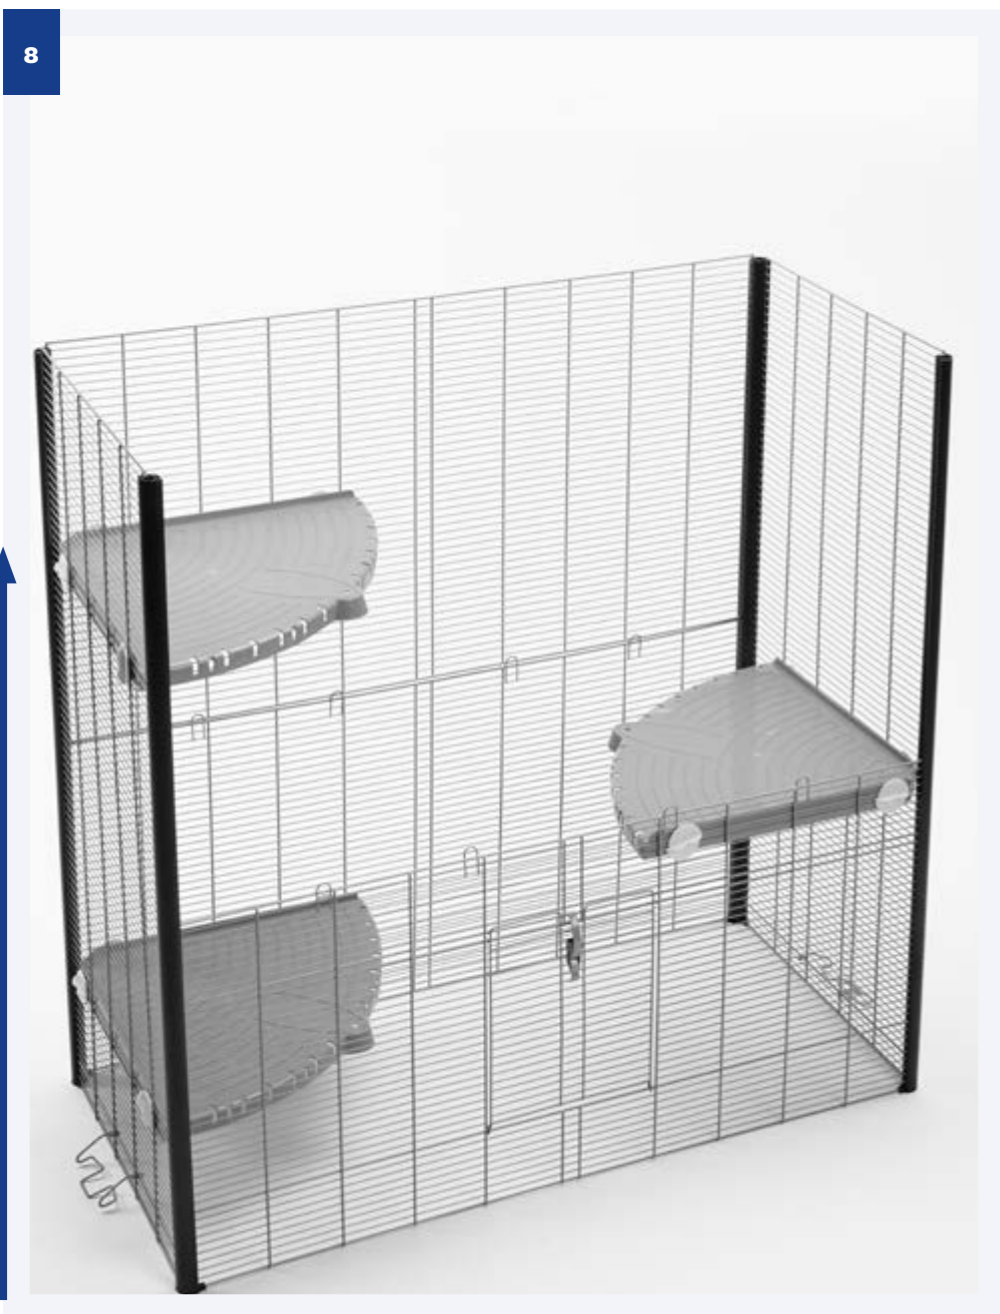

8

Place the 3rd platform left back: knobs between wire 52 and 53, height 57.5 cm or 22 1/2 inch, as shown in 8.



10A

L



10B

Place the roof panel (l) on top.




11A



11B

Attach the hammock (j) on the roof panel, place the corner toilet (i) in the bottom tray and connect the platforms with the ladder (c).

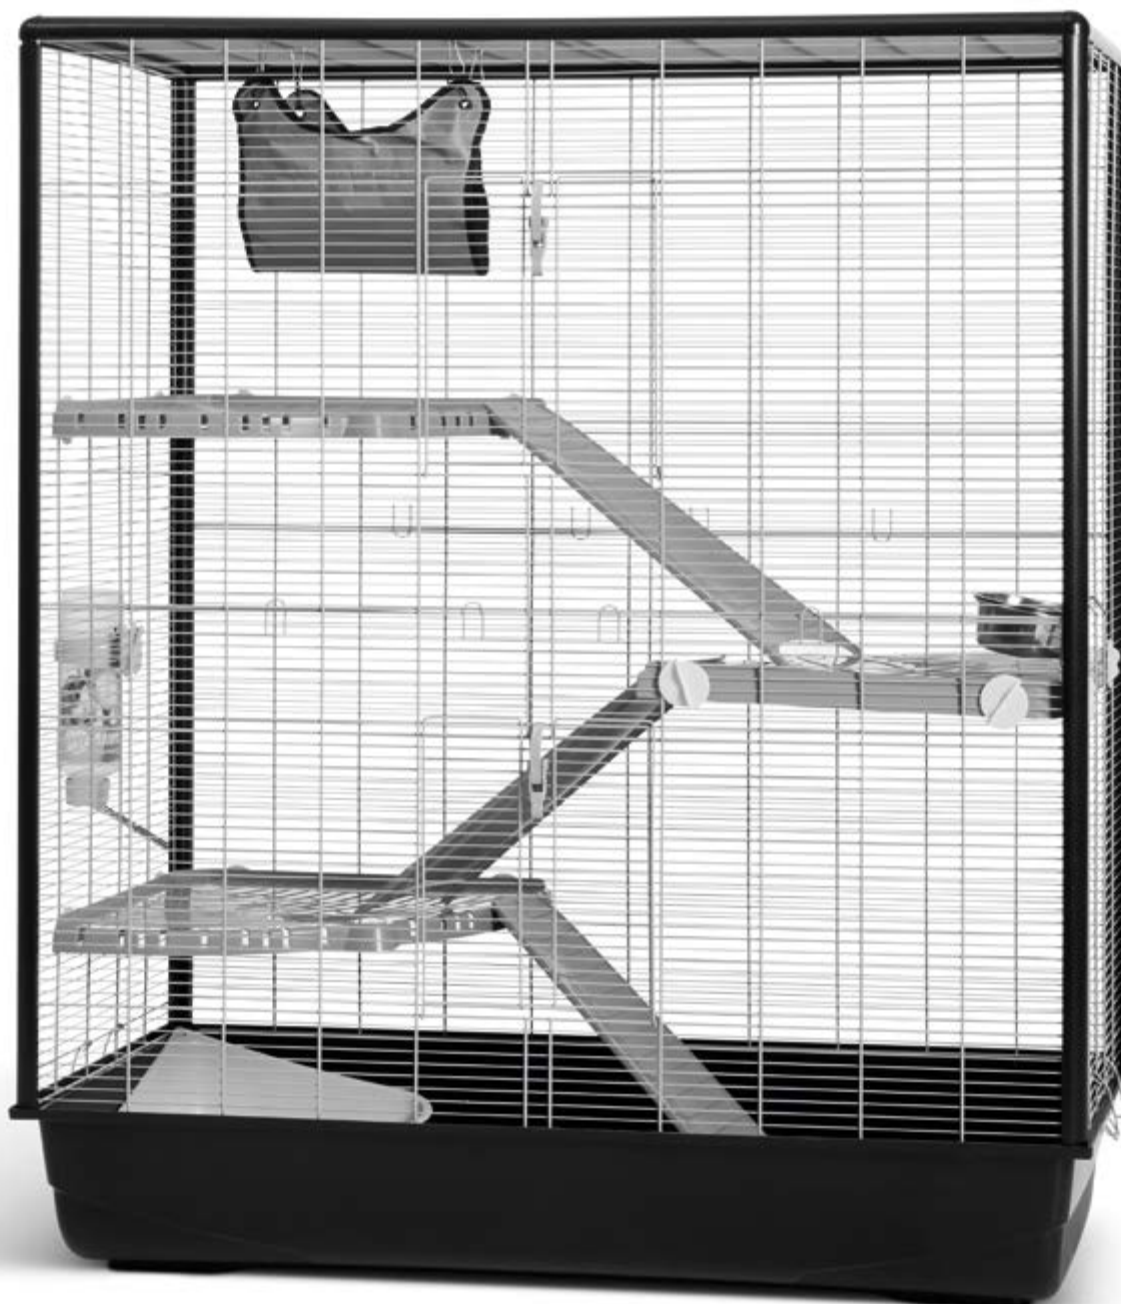

Finally, install the drinking bottle (e) and the feeding bowl (d) and your cage is now ready for use.

**[www.savic.be](http://www.savic.be)**

Ringlaan 10 • B-8501 Heule • Belgium  
Tel. +32 56 35 33 45 • Fax +32 56 35 77 30  
info@savic.be  
Doc.nr.: 931868

**SAVIC<sup>®</sup>**  
pets' favourite